ADDENDUM

SENTINEL[™] ADVANCED HANDSET ALARM

Innovative Wireless Technologies, Inc. 1100 Main Street Lynchburg, VA 24504

Phone: 434-316-5230 (United States) Fax: 434-316-5232 (United States) www.iwtwireless.com (United States)

© 2023 Innovative Wireless Technologies, Inc. Not to be reprinted, reproduced or distributed in any form without the written permission of Innovative Wireless Technologies, Inc.





Table of Contents

<u>1.0</u>	ADDENDUM OVERVIEW		
	1.1	What is the Advanced Handset Alarm?	. 3
	1.2	How Do I Create a Section?	. 3
	1.3	How Do I Edit a Section?	. 5
	<u>1.4</u>	How Do I Delete a Section?	7
	<u>1.5</u>	Operational Example	8



1.0 ADDENDUM OVERVIEW

1.1 What is the Advanced Handset Alarm?

The **Advanced Handset Alarm** enables custom groups of users to receive handset alarms based on their location in the mine and proximity to an alarming gas monitor.

The user will create a <u>defined section</u> near a working area on the mine map using geo-fencing in the Gas Monitors application. This enables handset users to receive gas monitor alarms to their handset, only when they are in a defined section with a gas monitor that raises an alarm.

The **Advanced Handset Alarm** feature reduces unnecessary alerts by only delivering alarms to select/relevant users.

1.2 How Do I Create a Section?

1.2.1 Select the Gas Monitors button on the dashboard.

mTracker	Equipment Admin	Messages	Gas Monitors	Events	Emergency
View Device Management Tools		L			- 0 X
Image: Constraint of the second se		C View 1 C View 2 Custom Views Customize C 75% View 3 Views Custom Views Views Construction Views Views View View View View View View View View	Ists Section Configure Met Configure		

1.2.2 Select the Section Mode button.

mTracker	Equipment Admin	Messages	Gas Monitors	Events	Emergency
View Device Management Tools O <th>Calloci V Gas Monitors V IP Equipment Batteries C Calloci V Gateways Labels V Repeates View Denses</th> <th>Above Ground C View 1 Contentier Working Face C View 2 Contentier Defense Status C View 2 Contentier Custom Views C View 3 Contentier Custom Views C View 3 Contentier Custom Views C View 3 Contentier Contentier View 2 Contentier C View 3 Contentier C Vi</th> <th>Device Lut: Section C Status Bar Section C Com Com com</th> <th></th> <th>- ð ×</th>	Calloci V Gas Monitors V IP Equipment Batteries C Calloci V Gateways Labels V Repeates View Denses	Above Ground C View 1 Contentier Working Face C View 2 Contentier Defense Status C View 2 Contentier Custom Views C View 3 Contentier Custom Views C View 3 Contentier Custom Views C View 3 Contentier Contentier View 2 Contentier C View 3 Contentier C Vi	Device Lut: Section C Status Bar Section C Com Com com		- ð ×



1.2.3 Draw the Section using the mouse. Click once to create an anchor point and move the mouse to create a line. Click again to continue adding anchor points and close the shape to complete the Section. Once the Section has been created, use the dialog box to name the Section and select the Color.

Note: The ability to send WGM Event Notifications to Handsets in this Section is checked by default. If this is unchecked, Handsets will not receive WGM Event Notifications.



1.2.4 Example of a completed section below.

Note: The completed Section 1 is reflected on the map and in the Section List.

mTracker	Equipment Admin	Messages	Gas Monitors	Events	Emergency
					- 0 ×
View Device Management Teols Out A S A S A S A S A S A S A S A S A S A	agnifier Callout: V Gas Monitors V IP Equipment Batteries A A V Gateways V W Labels V Repeaters View Desices	over Ground: C View 1 C 25% C 10 orking Face C View 2 Customice trey Status C View 3 Views Custom Views Icon Stee	0% Device Lists V Sections V Status Bar Window Panels Compute		Section List × Name Event Section 1 Yes
		Section 1			



1.2.5 For multiple Sections, repeat the process to draw additional Sections.

Note: Once all Sections have been created, click the Section Mode button again to exit Section Mode.



- 1.3 How Do I Edit an Existing Section
 - **1.3.1** Either right click on an existing Section on the map or click on the Section in the Section List to edit the name, color, or ability to send WGM Event Notifications to Handsets in this section.







1.3.2 Example of color change from orange to blue for Section 1.

1.3.3 Example of name change from Section 1 to Section 3.





1.3.4 Example of unchecking the box to send WGM Event Notifications to Handsets in the section.

Note: The Section changed from a shaded color to a dashed outline with no fill. Also, the event status changed from yes to no in the Section List.



1.4 How Do I Delete a Section?

1.4.1 Either right click on an existing Section on the map or click on the Section in the Section List to delete the Section.





mTracker	Equipment Admin	Messages	Gas Monitors	Events	Emergency
					- 0 X
View Device Management Tools	Gas Monitors IP Equipment Batteries Abo Mon Contenue	re Ground C View 1 C 25% C 1	00% Device Lists		Section List ×
Zoom Zoom Zoom Zoom Magnifie In Out All Selection Emergency View Magnification	er Callout V Repeaters View Devices	ny Status C View 3 Customize C 75% Custom Views Icon Size	✓ Status Ber ✓ Status Ber ✓ Vindow Panels Configure		Name Event Section 3 No
			Section 3		

1.4.2 Example below shows Section 2 has been deleted.

1.5 Operational Example

1.5.1 Example below shows WGM (AF7B) in Section 1 and Section 1 set to receive WGM Event Notifications

Note: In the example below, any handset that enters Section 1 will receive a handset alarm if/when WGM (AF7B) produces an alarming event.

